

TS800

User Guide



Compatible Equipment

CPA6 OM - Output Module

9040 - Loudspeaker

DC54/58 - Digital Communicator (Stand alone only)

LEC8 - 8 Zone Expander

User Programming Commands

Menu No	Menu	Passcode Level
1	Start Set Sequence	0 to 9
2	View Event Log	0 to 7 & 9
3	View Circuits	0 to 7 & 9
4	Start Walk Test	0 to 7 & 9
5	Start Bell Test	0 to 7 & 9
6	Change Codes	1 to 7 & 9
7	Enable Chime	0 & 1
8	Use Printer	0 & 1
9	Change the Clock	0 & 1
10	Alter Chime Circuits	0 & 1
11	Change Text	0 & 1
12	Reset by Code	1 to 7

Notes:

User 0 is the Engineer

User 1 is the Master

User 2 cannot unset Wards 3 and 4

User 3 cannot unset Wards 2 and 4

User 4 cannot unset Wards 2 and 3

User 8 can Set only and is for a cleaner

User 9 is a temporary (holiday) user

Menu 8 user Printer only shown if the printer is connected

Menu 12 only shown if Engineer reset is required

Menus 1 to 6 may be selected directly, after entering a passcode, by pressing the 'hot' keys 1 to 6 as required.